



LBK *Weighing Scales*

LBK scales offer quick and easy weighing right out of the box. The low profile design is compact and allows these scales to be used where you need them. Simple to use with only 5 keys, which are colour coded to highlight the most used keys for faster operation.

Basic weighing tasks are quick and easy with the LBK weighing scales. And with percentage weighing, basic parts counting and 5 weighing units the LBK can also be used for more complex weighing functions if needed.




LBK Weighing Scales

Features

- Vivid, backlit LCD easily visible in any lighting conditions
- Colour-coded keys facilitate quick recognition of the most frequently used buttons
- Level indicator and adjusting feet ensure proper balance setup for optimum weighing results
- Large, grade 304 stainless steel pan allows easy cleaning
- Lightweight design simplifies transport and portability
- Solid ABS housing is durable for industrial uses
- Audible overload alarm warns when capacity has been exceeded
- External calibration allows for verification and adjustment with weights
- Parts counting with preset sample sizes
- Zero-tracking feature ensures display returns to zero reading
- AC adapter included
- Rechargeable battery included for operation virtually anywhere
- Programmable auto power-off to save energy

Applications

- Weighing
- Parts counting
- Percentage weighing

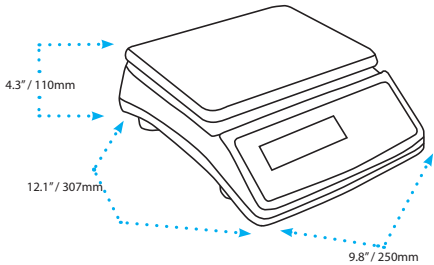

Model	LBK 3	LBK 6	LBK 12	LBK 30
Capacity	3kg	6kg	12kg	30kg
Readability	0.5g	1g	2g	5g
Repeatability (S.D.)	0.5g	1g	2g	5g
Linearity (+/-)	1g	2g	4g	10g
Pan Size	250x180mm			
Weighing Units	g, kg, lb, lb:oz, oz			
Stabilisation Time (sec)	2			
Calibration	External calibration			
Display	Backlit LCD with 24mm-high digits			
Power Supply	Mains power cord / Internal rechargeable battery			
Operating Temperature	0° to 40°C			
Housing	ABS			
Overall Dim.	250x307x110mm			
Net Weight	1.80kg			

With more than forty years of experience in the production of balances and scales, professionals worldwide rely on Adam for feature-rich, quality products with best-in-class value - The right balance of speed, performance and value.

Accessoriesw

- 700200056 In-use cover
- 700200063 In-use cover (pack of 5)
- 700200064 In-use cover (pack of 10)
- 700660290 Calibration certificate

Supplied by: