



WBZ *Washdown Retail Scales*

The Adam Equipment WBZ wash down approved retail scales are ideal for food preparation, packaging plants, agricultural facilities, and other retail applications. The WBZ scales feature an IP66 rated wash down housing with a large stainless steel weighing pan. The larger backlit display shows weight, price per unit and an easy to read extra large total cost display. They operate with a mains AC adaptor or rechargeable battery pack for portability; both are included.



WBZ Wash Down Retail Scales


Features

- Vivid, backlit LCD easily visible in any lighting conditions
- Rear display mounted on a pillar or back of the scale lets customers see key data
- Backlit LCD shows weight, unit price and total price, to provide the key information simultaneously
- Colour-coded keys facilitate quick recognition of the most frequently used buttons
- Heavy-duty rubber feet ensure stability of unit
- Large, grade 304 stainless steel pan allows easy cleaning
- Overload protection helps prevent damage to internal components
- Sealed keypad protects against dirt and accidental spills
- Solid ABS housing is durable for industrial uses
- External calibration allows for verification and adjustment with weights

- Preset tare function speeds the process of repetitive weighing
- Price displayed in choice of available currencies
- Security password control prevents unauthorised access
- Selectable auto-clear function enables the last item to be reset each time the scale returns to zero
- Switchable between price per kg and price per 100g
- Zero-tracking feature ensures display returns to zero reading
- IP66 rated for protection against water and dust
- AC adapter included
- Rechargeable battery included for operation virtually anywhere
- Programmable auto power-off to save energy

Applications

- Weighing
- Price computing

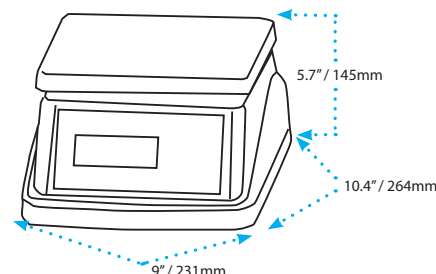

Model	WBZ 3	WBZ 6	WBZ 15
Capacity	3kg	6kg	15kg
Readability	1g	2g	5g
Repeatability (S.D.)	1g	2g	5g
Linearity (+/-)	2g	4g	10g
Pan Size	210x173mm		
Weighing Units	kg		
Stabilisation Time (sec)	2		
Calibration	External calibration		
Display	Backlit LCD with 16mm-high digits		
Power Supply	12VDC 800mA adapter / Internal rechargeable battery		
Operating Temperature	-10° to 40°C		
Housing	ABS		
Overall Dim.	231x265x153mm		
Net Weight	3.30kg		
Approvals	EC type approval / NRCS approved		

With more than forty years of experience in the production of balances and scales, professionals worldwide rely on Adam for feature-rich, quality products with best-in-class value - The right balance of speed, performance and value.

Supplied by:

Item number

- 303200002
- 303200003
- 303209190
- 303147959
- 303147960
- 303147961

Description

- In-use cover (pack of 10)
- In-use cover (pack of 20)
- In-use cover
- Large Scoop (complete with fitting to scales)
- Small Scoop (complete with fitting to scales)
- Medium Scoop (complete with fitting to scales)